

Instructions for the use of safety belts



1. The hooks of the clamping strap, ready to chuck ok (eg. the floor of the vehicle).
2. A harness gird material. Make sure the strap is not twisted.
3. The free end of the clamping strap through the hole in the axis of the ratchet. Movement of the ratchet handle adequately tighten the strap. Pressing the ratchet handle and against release.
4. To release the strap ratchet handle to open and release the lock by pulling the handle.

CAUTION:

Protect strap against sharp edges, heat and acid, could cause damage and subsequent failure. Check the strap hooks and iron part before each use. Replace it if it is cut, worn or damaged in any manner. Make sure that you consolidate hooks safely and properly. Hooks and strap should be in a straight direction. Check strapping and anchoring the individual parts every 40 km. Do not use for lifting, pulling or towing vehicles.
Use only for tying.

Heed these warnings to prevent possible damage to the load or vehicle.

IMPORTER: LEVIOR s.r.o.

